



ANC

# User's Guide

EN

## Specification E7

- Load impedance: 16Ω
- S/N: ≥ 85dB
- Frequency range: 20Hz-20KHz
- Power supply: Lithium battery or Micro USB cable
- Audio source: iPhone, iPad, Smartphone, Notebook, MP3, MP4, etc
- Function spec: Bluetooth, Microphone
- Size: 166x92x181mm

## Important information

 
- Support Line in Noise Cancelling.
- Couldn't Play Music under Line in When Power off.

## Battery Precautions


The device can be powered by a built-in rechargeable lithium battery. Please charge the battery for at least 8 hours before your first use of device.

- Rechargeable batteries are only to be charged under adult supervision.
- Use only the supplied micro USB cable to recharge the battery. Improper charging may damage the battery and the device.
- Do not attempt to open the rechargeable battery or battery pack. There are no serviceable parts inside.
- Keep the battery out of reach of children. If swallowed, consult a physician immediately.
- Do not dispose batteries in a fire as they may explode. Batteries may also explode if damaged. Please dispose them according to local regulation.


## Getting Started

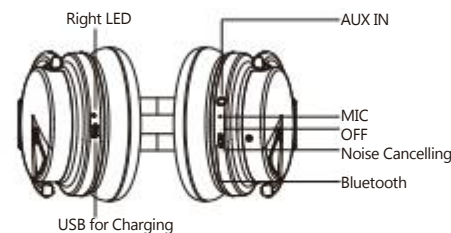

## Installation Operation

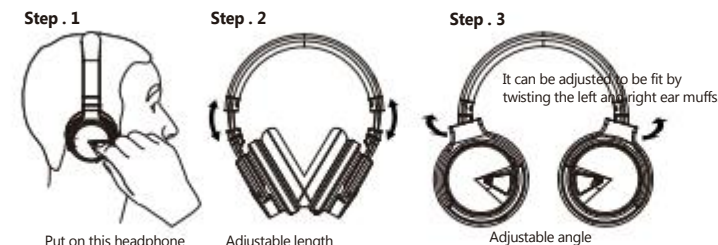 

## Cable Connection

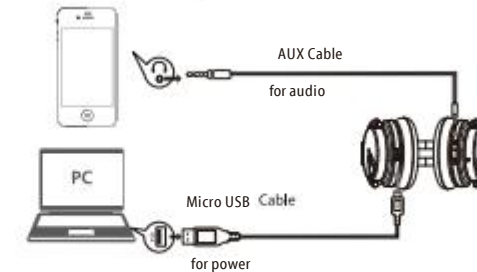 

## Bluetooth Connection

Pairing headphone to your Smart device (Smart device should be within 10 meters of this headphone).

1. Activate pairing mode on headphone by turn the switch to "BT". The LED will flash in blue.
2. Turn on Bluetooth function of your device, (refer to the device owner's manual to locate Bluetooth function).
3. Select "Search" or "Discover" devices.
4. Select "E7".
5. If requested, type the password or PIN 0000
6. Press the Enter key.

After completing the steps above, a message on your Smart device will appear confirming that your device is now paired/ connected.

In case of unsuccessful pairing, turn off it and restart, then do as steps above. If the Bluetooth on your smart device remains open, when you restart the headphone, the Bluetooth will be connected automatically.

## Function Guidance

### Play music from your Smart device

Button	Operation	Function
⊕	Long Press	Volume up
⊕	Short Press	Next song
⊖	Long Press	Volume down
⊖	Short Press	Previous song
⏸	Short Press	Play/Pause, Answer/End a call
⏸	Long press	Ready for pairing

## LED Display Status

	LED Display	Light indication	
Right Light	Blue	Flash	Power ON
		Stay Solid	Paired
	White	Active noise cancelling ON	
Left Light	Red	Charging in process	
	OFF	Fully charged	

## Product care

- Do not drop, crush, bend or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places, as it is not waterproof.
- Clean the unit with a soft cloth or damp chamois leather. Never use solvents.
- The Unit can only be opened by qualified personnel.
- This device contains magnets. Keep magnetic field sensitive products such as credit cards and video screen away from this device to avoid damage or malfunction.